



# Pooltest 9 Photometer User Manual

# Contents

Chapter	Page	Chapter	Page
<b>1 Typical Kit Contents</b>	3	<b>7 Analysing Samples</b>	13
<b>2 Introduction</b>	4	Selecting Test Parameters	13
<b>3 Quick Start</b>	5	Dilution Factor	13
Pooltest 9 Layout	5	Blanking Pooltest 9	13
Pooltest 9 Interface	5	Reading with the Pooltest 9	14
Info Panel	5	Timer	15
<b>4 Taking a Sample</b>	6	Changing Result Units of Expression	15
<b>5 Starting up the Instrument</b>	7	Follow-on Tests	16
Power Supply	7	<b>8 Test Methods</b>	17
Replacing Batteries	7	<b>9 Calibration/Validation</b>	21
Start-up Screen	7	Check Standard Mode	21
Mode Screen	7	Enter Check Standard Values	21
Choose a Test	7	Check Standard Measurement	21
System Mode	7	<b>10 Appendix 1</b>	22
Check Standard Mode	7	Photometric Testing Hints and Tips	
<b>6 System Mode</b>	8	<b>11 Appendix 2</b>	23
Log	8	Troubleshooting	
Operator ID	8	<b>12 Appendix 3</b>	25
Sample ID	9	Technical Specifications	
USB Interface	10	<b>13 Appendix 4</b>	26
Units	10	Spares and Consumables	
Dilution Factor	11		
DPD Range	11		
System Lock	11		
Water Balance	11		
Temperature	11		
Language	11		
Set Time/Set Date/Date Format	11		
Time Out	12		
Back Light	12		
LCD Contrast	12		
Version	12		

Function	Equipment
● Starting/Setting Up the Pooltest 9	<ul style="list-style-type: none"> <li>● <b>Photometer 9</b></li> <li>● <b>Light Cap</b></li> </ul>
● Sample Preparation	<ul style="list-style-type: none"> <li>● <b>Dilution Tube</b></li> <li>● <b>10ml Syringe</b></li> </ul>
● Analysing Samples	<ul style="list-style-type: none"> <li>● <b>Cuvettes</b></li> <li>● <b>Crush/Stir Rods</b></li> <li>● <b>Cuvette Brush</b></li> <li>● <b>Cleaning Cloth</b></li> <li>● <b>Cuvette Rack (benchtop kit only)</b></li> </ul>
● Reagents	<ul style="list-style-type: none"> <li>● <b>Initial Reagent Pack</b></li> </ul>
● USB Connection	<ul style="list-style-type: none"> <li>● <b>USB Cable</b></li> </ul>
● Other Items	<ul style="list-style-type: none"> <li>● <b>Instruction Manual</b></li> </ul>

**Important Information concerning Bluetooth®**

The Palintest Aqua Pal App that this instrument was designed to connect to, via Bluetooth, is no longer available. Connectivity is now solely via USB. Therefore, all references to Bluetooth have been removed from this user manual. You may still notice menu options in the instrument relating to Bluetooth and it remains installed and functional. However, it would require third-party software or applications to be developed for it to be useable. Please contact Palintest should you require further information about this.

## 2.0 Introduction

The Palintest Pooltest 9 is a direct-reading, waterproof photometer for determining key water quality parameters for swimming pools, hydrotherapy pools, hot tubs and spas. Designed for both portable and static use, the Pooltest 9 should always be used with genuine Palintest reagents for optimal performance.

The fundamental operating technique applied to the Pooltest 9 is based on the principles of optical absorbance and scattering of visible light.

Optical absorbance techniques are based on the use of Palintest (spectro)photometric reagents, creating visible colours with specific analytes upon reaction. The intensity of colour produced is measured with the Pooltest 9 and the data compared to the stored calibration data to deliver the final result.

Optical scattering techniques produce small particles to scatter the source beam, the amount of scatter providing a result for the concentration of parameter under test.

The Pooltest 9 is provided with programmed methods for a comprehensive range of water quality parameters. Upon choosing a test the instrument automatically selects the required parameters for accurate analysis including

wavelength and reaction time. On completion of some tests optional follow-on tests are available plus results can be converted to alternative units of expression e.g. mg/l to ppm, N or NH<sub>3</sub>.

USB connection via the port located at the rear of the instrument provides a choice of either 'Hard Disk' mode or serial communication mode. See Section 6.5 for more details.

The Pooltest 9 offers a choice of either mains power via the USB port or using three 1.5V 'AA' batteries (supplied).

The Pooltest 9 is delivered with a two year warranty and a full range of service, calibration and technical support. Additional resources are available at [www.palintest.com](http://www.palintest.com) relating to both products and applications.


## 3.0 Quick Start

### 3.1 Pooltest 9 Layout



### 3.2 Pooltest 9 Interface

The LCD screen features a selectable backlight with the screen separated into four clear, easy to read zones.

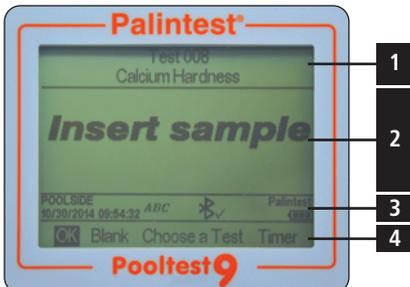

1 Mode or Test Identification.

- 2 Dialogue screen - prompts and choices will be displayed as a list. Select using up/down arrows.
- 3 Info Panel - displays status icons, date/time and Sample/Operator ID.
- 4 Action select - choices are displayed as a row. Use left/right arrows to select.

### 3.3 Info Panel Icons

Icons	Description
	Battery status
<b>ABC abc 123</b>	Upper/lower case text/number entry
	USB connected
<b>DISK / COM</b>	Hard Drive/COM port mode

## 4.0 Taking a Sample

The first critical step in any analysis is taking a representative sample. When selecting a sample point a number of care points are recommended as follows:

- Ensure the sample point is safe to access and follow all relevant/required precautions
- When sampling from a tap or outlet, remove any attachment and clean the tap/outlet with a dry cloth before allowing to run for 1 minute prior to sample collection
- When sampling from a pool or spa take the sample as near as possible to the centre of the pool and at least 20cm below the surface of the water
- Rinse any sample container repeatedly with the sample to prevent any cross contamination from previous samples
- Once collected the sample must be processed immediately or as quickly as possible, especially for highly reactive species such as chlorine for example. The use of a portable field test kit makes this possible. However if the delay between sample collection and analysis is likely to be several hours chill the sample to preserve and prevent potential sample deterioration
- Samples containing solid particles can interfere with photometric analysis. Either allow solids to settle and decant the clear liquid or filter the sample prior to analysis

## 5.0 Starting up the Instrument

### 5.1 Power Supply

The Pooltest 9 is designed to be powered either from alkaline batteries or via the USB port.

When operating on battery power, the battery level is indicated on the Info Panel. A minimum voltage of 3.0V is needed to operate the photometer and a flashing battery symbol indicates a critically low battery. Change batteries immediately or switch to alternative USB power. The Pooltest 9 will automatically power down when power is no longer capable of providing acceptable performance.

To power via the USB port, use the supplied cable connected either to the mains adaptor or a PC. The USB icon will appear when the USB connection is made and battery power will no longer be consumed.


The Pooltest 9 has a back-up battery mounted internally to save instrument settings and data during power loss and instrument idle periods.

### 5.2 Replacing Batteries

The battery compartment is located on the base of the instrument and secured by four screws. Remove the cover and install a complete set of new batteries, observing the correct polarity as indicated. Use 3 x 1.5V 'AA' alkaline batteries or equivalent. See Appendix 2 for more details.

To avoid corrosion damage through leakage, remove batteries from the instrument if it is to be stored or left unused for a long period.

### 5.3 Start-up Screen

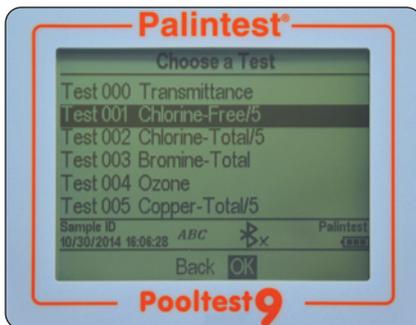


The default start screen on power up is the 'Choose a Test' screen.

To access the Mode menu press the left arrow key to highlight 'Back' and press OK on the keypad.

To choose a test use the up/down arrows to scroll through the list and press OK on the desired parameter or use the direct access.

### 5.4 Mode Screen

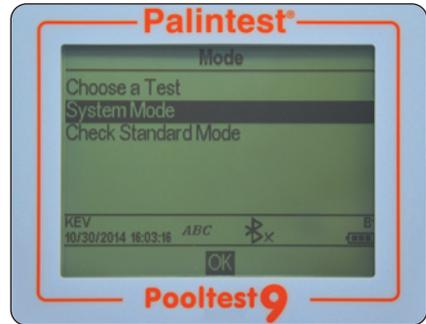

The Pooltest 9 has three operating modes as follows:

#### Choose a Test

The Choose a Test mode is the standard operating mode for taking photometer readings and is the default start-up screen on power up. See Section 8 for more information.

#### System Mode

Personalise your Pooltest 9 and manage stored data within the System mode. Options include setting Operator/Sample IDs, interrogating the result log and defining the instrument operating conditions. See Section 6 for further information.

#### Check Standard Mode

Validate performance of your Pooltest 9 using Palintest Check Standards. See Section 9 for more information.

## 6.0 System Mode

Personalise your Pooltest 9 and access the data log via the System Mode.



Scroll up or down using the appropriate keys to see all available options. The options and available settings are as follows:

### 6.1 Log

The Pooltest 9 has an internal data log for up to 100 data points. The data is stored automatically upon completion of the test and automatically overwrites the oldest result when the memory is full. The data log is unaffected by power on/off.

Each data point consists of the following information and is stored in a comma-separated values (CSV) format:



Selecting Log offers two choices:

**View** - to view individual data points use the up/down keys. Data is stored in chronological order with the most recent result shown by default. Scroll through results using the up/down arrows. Select Back to return to the previous menu.

**Clear** - the entire log can be deleted from the Pooltest 9 if the instrument is not locked (see **System Lock**). Selecting Clear produces the following screen:



Choose Yes to delete all data, No to return to the previous screen.

Data can be downloaded via USB connection (see **USB Interface**).

### 6.2 Operator ID

The Pooltest 9 offers the option to create up to 12 unique alphanumeric Operator IDs. Operator IDs are added to the result data automatically but deleting IDs does not affect the result log.



To create a new Operator ID, select Operator ID and use the up/down keys to select a blank field. Select New and press OK.

Alphanumeric characters are entered/edited using the 0-9 keys or the up/down keys. Press and hold the 1 key to toggle between upper case, lower case and numeric characters.

After entering a character, the cursor automatically moves to the next position if no key is pressed. Alternatively press the right key.

Up to 10 characters can be added for Operator IDs, including spaces.



To edit characters use the left/right keys to select the desired character. Press and hold the left key to delete the character or change the character using the entry mode.

When the Operator ID is correct press the OK key to create the ID and return to the Operator ID list. The new Operator ID will be displayed in the Operator list.



Choose the Operator ID to be used by scrolling through the list and pressing the OK key on the desired choice. The instrument will return to the System menu.

To modify or delete an existing Operator ID, highlight the ID and select Edit. Choose either Edit to modify the existing entry or Delete to remove it from the list.

### 6.3 Sample ID

The Pooltest 9 offers the option to create up to 24 unique alphanumeric Sample IDs. Sample IDs are added to the result data automatically but deleting IDs does not affect the result log.




To create a new Sample ID, select Sample ID and use the up/down keys to select a blank field. Select New and press OK.

Alphanumeric characters are entered/edited using the 0-9 keys or the up/down keys. Press and hold the 1 key to toggle between upper and lower case characters.

After entering a character, the cursor automatically moves to the next position if no key is pressed. Alternatively press the right key.

Up to 10 characters can be added for Sample IDs, including spaces.

To edit characters use the left/right keys to select the desired character. Press and hold the left key to delete the character or change the character using the entry mode.

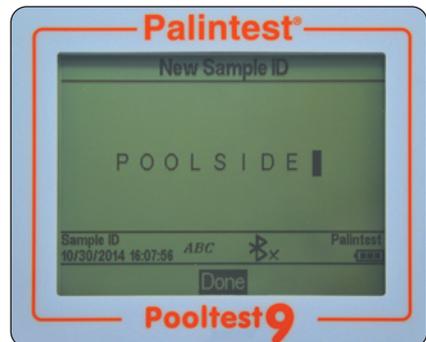

When the Sample ID is correct press the OK key to create the ID and return to the Sample ID list. The new Sample ID will be displayed in the Sample list. Choose the Sample ID to be used by scrolling through the list and pressing the OK key on the desired choice. The instrument will return to the System menu.

To modify or delete an existing Sample ID, highlight the ID and select Edit. Choose either Edit to modify the existing entry or Delete to remove it from the list.

## 6.5 USB Interface

The waterproof USB interface provides both communication between the Pooltest 9 and a PC and an alternative mains power source via the adaptor.

When connected the USB icon will appear, replacing the battery icon in the Info Panel, as power will be preferentially drawn from the external source.

The USB data interface has a choice of two operating modes - Hard Drive and COM Port. The current status of the USB connection is shown on the Info panel when the USB lead is connected.


Toggle between COM Port and Hard Disk mode in the System -> USB menu by selecting the desired option.

The USB connection supports software update and data download through a simple 'drag and drop' approach when operated in Hard Disk mode.

### Hard Drive


The instrument appears as a removable hard drive when connected to a PC in Hard Disk mode. Upon connection the remote drive will have the following files included:

- Pooltest 9\_\*\*\*.afx.\*\*\* where \* represent version numbers of software - this is the operating software for the Pooltest 9
- Log.txt - the data log file stored in a comma separated value (csv) format

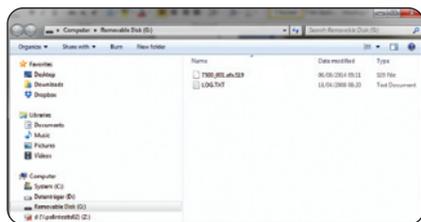

Operating software or calibration library can be updated by dragging a new version to the instrument.

Downloading the result log is carried out by dragging the LOG.txt to the local desktop and opening the file with any program that can open CSV format files.

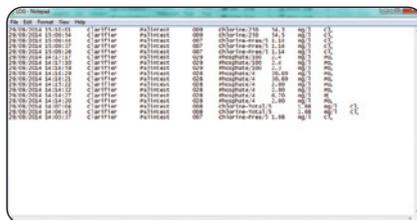

### COM Port

The instrument behaves as if connected to the PC serial port via RS232 when connected in COM Port mode, allowing remote control from an external software system and data upload.

This allows backwards compatibility with software written for earlier models of Palintest instruments. In this mode, the PC requires installation of a USB virtual COM Port driver.

## 6.6 Units

The Pooltest 9 offers the choice of result expressed in mg/l, ppm, mmol/l,  $\mu$ mol, g/l and  $\mu$ g/l.



Changing the result units will not affect the result log.

### 6.7 Dilution Factor

When samples are above the test range, indicated by >> on the result screen, a dilution procedure can be used. Setting Dilution Factor to On will prompt the Pooltest 9 to automatically request the dilution factor when carrying out a test.

Change the dilution factor by using the up/down arrows or manually type the dilution factor. The instrument will automatically correct the result for the dilution and display the corrected result (which will also be stored in the result log).

The maximum dilution factor permitted is 99.

If the calculated result exceeds the available number of permitted characters >> will be displayed.

**NOTE:** do not use sample dilution when measuring pH or alkalinity.

### 6.8 DPD Range

The Pooltest 9 operates in a choice of DPD ranges, depending on the pool treatment programme.

Two choices are available and only one range can be used at any time:

- 0-5** the 'standard range' of 0-5mg/l (ppm) Cl<sub>2</sub>. In this range the AP 011 and AP 031 DPD reagent packs are suitable
- 0-10** the 'extended range' of 0-10mg/l (ppm) Cl<sub>2</sub>. In this range the AP 013 DPD XF and AP 033 DPD XF/XT packs will be required to carry out the testing.

The selected range of DPD will be indicated in the Test List e.g. Test 001 Chlorine-Free/10 indicates the extended range has been selected and the DPD XF reagent should be used.

### 6.9 System Lock

To prevent unauthorised or inadvertent changes to the System settings or log deletion a four digit code can be used to lock several options.

The default code is set to 6812. To change the System Lock code, follow the on-screen prompts to choose a memorable four digit number.

When the System Lock is applied, the items accessible within the System Mode are limited until the unlock code is entered.

### 6.10 Water Balance

Two options are available for the Test 77 Water Balance scale:

**Palintest** uses the simplified Palintest scale which assumes values for Total Dissolved Solids (TDS) and temperature and removes the need to measure these parameters.

**Langelier** uses the results from a TDS/temperature meter to calculate the Langelier Saturation Index (LSI) value.

### 6.11 Temperature

Choose between °C and °F. The temperature setting is used during the Langelier Saturation Index when selected from the Water Balance option.

### 6.12 Language

Select the desired local language for operation, choosing from English, French, Spanish, German, Italian and Chinese (Mandarin). The selection of language will also adjust appropriate tests and units to local convention as required.

### 6.13 Set Time/Set Date/Date Format

All test results are recorded automatically in the Data Log and appended with date and time (plus additional information). Date and time are stored on an internal clock, supported by a coin cell battery. To correct the time select Set Time from the System menu. Use the up/down keys to adjust the hour; press the right key to select and adjust the minutes.



Press OK when the correct time is set.

To correct the date select Set Date from the System menu.

Use the up/down keys to adjust the day/month/year, using the left/right keys to select the field.



Press OK when the correct date is set.

The Date Format can be set to DD/MM/YYYY or MM/DD/YYYY as required. To select the required format highlight the desired choice and press OK.

#### 6.14 Time Out

When operating using battery power the Pooltest 9 provides automatic power-off as a power-saving measure. Three settings are provided:

- Normal** 5 minutes
- Long** 15 minutes
- Off** (disables Time Out)

The time intervals begin after the last key is pressed or activity takes place.

Time Out is automatically disabled when the instrument is powered by USB supply.

#### 6.15 Back Light

The instrument display features a high intensity backlight to support use in low light conditions. The backlight is designed to use minimal energy but activating will naturally consume battery power more rapidly. The settings available are:

**Backlight Auto-Dim** Backlight activates on any key press and dims after 15 seconds automatically.

**Backlight On** Backlight is on permanently

**Backlight Off** Backlight is off permanently

#### 6.16 LCD Contrast

In addition to the Backlight, the default contrast setting for the display can be adjusted using the up/down keys when light conditions are difficult. The display provides a sequence of alternating squares to give visual indication of the correct settings to apply.



When complete/acceptable press the OK key.

#### 6.17 Version

The serial number of the instrument and the software version are displayed. The instrument serial number will be required for technical support and servicing/warranty and can also be found on the case of the instrument.



## 7.0 Analysing Samples

The Pooltest 9 provides simple, accurate and reliable analysis of key pool, spa and other aquatic samples. Selecting the required parameter and performing the test are supported through on-screen prompts and comprehensive test instructions.

The principle of photometric testing is based on the absorption or scattering of a measured intensity of incident light compared to the light intensity reaching the detector array. The light intensity is determined as Transmittance (%T) or Absorbance (A) and compared to calibration tables stored within the Pooltest 9. The stored calibration tables convert %T or A to results in a variety of units (mg/l, ppm etc.) as defined in Section 6.6.

Calibration tables are defined by Palintest based on the measurement of reference standards using Palintest reagents. To achieve the best quality results there are a small number of care points:

- 1 Always use the provided light cap to prevent ambient light affecting the results.
- 2 Ensure Sample and Blank cuvettes are clean, dry and inserted correctly into the sample chamber, using the allocated orientation mark to align.
- 3 Always blank the instrument with untreated sample prior to analysis.

Additional guidance is provided in **Appendix 1 Photometric Testing Hints and Tips**

### 7.1 Selecting Test Parameters

The Pooltest 9 offers a number of choices to select the parameter to test:

**Test Number Entry** - use the numeric keypad to enter the unique Test Number to directly access any programmed calibration.

**Direct Entry** - use the numeric keypad to directly access the 10 most common tests with a single key push.

**Choose a Test** - the full list of test parameters is available by selecting Choose a Test and scrolling using the up/down keys. When the desired parameter is highlighted, press the OK key to access the method. Tests are presented in Test Number order. When the required test is selected the Pooltest 9 automatically selects the correct wavelength and sets

additional method parameters as required.

Test method protocols are defined in detail section 8, including the reagents and accessories that may be required.

When a test is selected, the Pooltest 9 will display a number of screens and options to guide the user through the testing process, as described in the following pages.

### 7.2 Dilution Factor

If selected in the System menu, the initial screen will request the defined Dilution Factor to apply to results.



If Dilution Factor is not active this screen will not be shown.

Results shown on the final screen have automatically been corrected for dilution prior to display. Corrected results will also be stored in the log.

**Note:** if the System Lock is applied the Dilution Factor functionality cannot be switched on or off from the current status until the system is unlocked.

### 7.3 Blanking the Pooltest 9

Blanking the photometer is a key first step in photometric analysis, effectively removing the potential entrained sample colour and minor amounts of turbidity from calculation of analytical results.

To blank the photometer, prepare a Blank cuvette using untreated sample i.e. sample that has not been reacted with any reagents. If the sample is to be diluted or physically treated (filtered for example) before analysis, use the same dilution/treatment for the Blank cuvette.

When accessing the test method the Pooltest 9 will request the user to Insert Blank.



Insert the Blank cuvette and press OK.



The Pooltest 9 will determine the absorbance due to the sample colour at all wavelengths simultaneously and store in temporary memory for use in analysis.

Upon successful blanking the Pooltest 9 will automatically move to the Insert sample stage of the analytical method.


If the sample is too highly coloured to support effective blanking and subsequent analysis the error message "Error 9 is caused by the blank cuvette being too dark. Check the correct cuvette is being used".



Ensure the blank cuvette is being used, not the sample plus reagent cuvette. Sample colour can be reduced by dilution with clean water; the dilution selected should take account of the expected concentration of parameter under test. Blank results are stored in the temporary memory of the Pooltest 9 and will be used for all subsequent tests until:

- The instrument is powered down (temporary memory is lost/deleted)
- A new Blank reading is taken - this option is available on accessing any subsequent test at the base of the screen. Repeat the blanking process if the sample changes significantly or a new sample is under test
- Some tests use a reversed blanking process where a coloured blank cuvette may be required. When changing between standard tests and 'reverse blank' test, a new blank will be requested by the Pooltest 9.

If the blank value generated in this step is not detectable an error message will be displayed "Error 7 is caused by too much ambient light. Try using the light cover provided with the instrument".

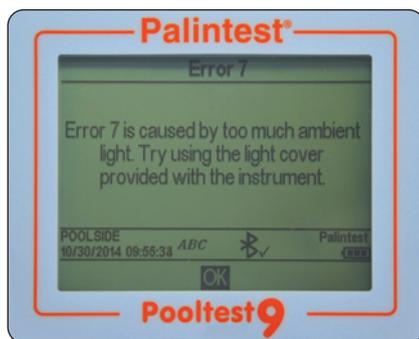

See Appendix 1 Photometric Testing Hints and Tips for more advice regarding effective blanking.

#### 7.4 Reading Results with the Pooltest 9

Assuming a suitable blank has been recorded, the next step of the photometric analysis process is to carry out the reading step.

Prepare a Sample cuvette following the method instructions provided in Chapter 8.

Select **Read** at the base of the screen and press **OK**.

At the **Insert sample** prompt, insert the sample cuvette ensuring it is clean and dry and oriented correctly using the location mark.



Press **OK** to begin the measurement process. The screen will display **Reading...**



At the completion of the measurement process the result is displayed on screen.



## 7.5 Timer

Many photometric methods require a reaction time to develop, the recommended time period being documented in the Palintest Phot Book and included as part of the method parameters programmed into the Pooltest 9.

Tests requiring a reaction time will have the option to select an automatic timer to count down the reaction time required. While in the Insert sample screen use the right key to move the cursor to highlight **Timer**.




The programmed reaction time will be displayed. Press **OK** to **Start** the countdown.

Three options will be displayed:

- Stop** cancel the countdown timer
- Exit** exits the countdown screen and returns to the Insert sample screen. The countdown will continue and the current time can be seen by selecting **Timer**. At the end of the countdown an audible alarm will sound to indicate the sample is ready to read. Select **OK** to read the sample manually.
- Exit and Read** exits the countdown screen and automatically reads the sample at the completion of the allocated time period.

## 7.6 Changing Result Units of Expression

Many chemical species have a number of alternative units that can be used for reporting results e.g. Phosphate can be expressed as  $\text{PO}_4$  or P for example.

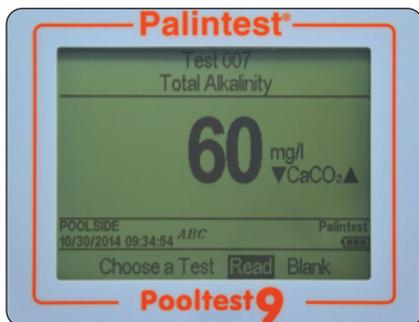

Where alternative units of expression for results are available the ▲▼ symbols will be displayed next to the current result units. Use the up/down arrows to change the units of expression as required. Values are modified automatically.

Results stored in the log will be in the units selected on screen, changing the chemical species will add an entry to the log showing the updated result and species parameter selected.

### 7.7 Follow-on Tests

A number of photometric methods have additional optional methods that can be applied, known as Follow-on Tests e.g. Phot 008 Total Chlorine follows

Phot 007 Free Chlorine. Follow-on methods are usually either based on further reagent addition to the sample just measured for sequential parameters or used to correct for potential/known interferences. Follow-on tests are clearly defined in the Section 8 and, if available, are accessed via the **Follow-on** option located at the right hand side of the options.



To access the Follow-on test, highlight Follow-on and press OK. The next method is automatically loaded and operated in the usual manner.

**NOTE:** if no viable result is produced during the first stage of a sequential test method, the Follow-on option will be automatically removed.

## 8.0 Test Methods

The Pooltest 9 provides simple test protocols for the key parameters required to effectively control swimming pools, hydrotherapy pools, spas and hot tubs.

The tests available by number are as follows:

Test No.	Test Name	Notes
0	Transmittance	Select wavelength manually using up/down arrows
1	Chlorine-Free	Select range from the System Mode
2	Chlorine-Total	Select range from the System Mode
3	Bromine-Total	
4	Ozone	
5	Copper	
6	pH-Phenol Red	
7	Total Alkalinity	
8	Calcium Hardness	
9	Cyanuric Acid	
10	Iron/1	
88	Calc. Hard. Salt	Use when testing Calcium Hardness in a salt pool
77	Water Balance	Choose Palintest or Langelier from the System Mode

### Test 1 Chlorine-Free/5 or Chlorine-Free/10

**Standard Range:** 0-5.00mg/l (ppm) Cl<sub>2</sub> (use DPD 1)

**Extended Range:** 0-10.0mg/l (ppm) Cl<sub>2</sub> (use DPD XF)

**Colour change:** Colourless - Purple/Red

- 1 Rinse test cuvette with sample leaving two or three drops in the tube.
- 2 Add **one DPD 1 or DPD XF** tablet, crush tablet and then fill the test tube with sample to the 10ml mark. Mix to dissolve tablet fully and ensure no particles remain.
- 3 Take photometer reading immediately. The result may drift on standing.
- 4 Retain test solution if the Total Chlorine Follow-On Test is required.

### Test 2 Chlorine-Total/5 or Chlorine-Total/10

**Standard Range:** 0-5.00mg/l (ppm) Cl<sub>2</sub> (use DPD 3)

**Extended Range:** 0-10.0mg/l (ppm) Cl<sub>2</sub> (use DPD XT)

**Colour change:** Purple/Red from Test 1 increases in intensity

Carry out this test on the solution remaining from the Free-Chlorine/5 test.

- 1 If any **shock treatment chemicals** have been added to the pool, **add one DPD Oxystop** tablet, crush and mix to dissolve. **Stand for one minute** before proceeding. This will prevent a false response caused by the shock treatment chemicals.
- 2 Add **one DPD 3 or DPD XT** tablet, crush and mix to dissolve.
- 3 **Stand for two minutes** to allow full colour development.
- 4 Take photometer reading after two minutes have elapsed.

**Note:** To obtain **Combined Chlorine** residual subtract Free Chlorine result from Total Chlorine result:

**Combined Chlorine =  
Total Chlorine - Free Chlorine**

**Test 3 Bromine****Range:** 0-10.0mg/l (ppm) Br<sub>2</sub>**Colour change:** Colourless - Purple/Red

- 1 Rinse test cuvette with sample leaving two to three drops in the tube.
- 2 Add one DPD 1 tablet, crush tablet and then fill with sample to the 10ml mark. Mix to dissolve tablet fully and ensure no particles remain.
- 3 Take photometer reading immediately. Result may drift on standing.

**Test 4 Ozone****Range:** 0-2.00mg/l (ppm) O<sub>3</sub>**Colour change:** Colourless - Purple/Red

- 1 Rinse test cuvette with sample leaving two to three drops in the tube.
- 2 Add one DPD 4 tablet, crush tablet and then fill with sample to the 10ml mark. Mix to dissolve tablet fully and ensure no particles remain.
- 3 Take photometer reading immediately. Result may drift on standing.

**Note:** The ozone test also responds to chlorine and bromine. Pools using 'ozone with chlorine' treatment systems, or other combined treatments will produce a result at this stage representing the ozone plus other treatment chemicals. To determine ozone specifically requires an additional protocol as follows:

**Correction for Chlorine or Bromine**

- 1 Fill a test cuvette with sample to the 10ml mark. Add one DPD Glycine tablet, crush and mix to dissolve.
- 2 Take a second clean test tube and add two to three drops of solution from the first tube. Add one DPD 4 tablet, crush and then make up to the 10ml mark with the solution from Step 1. Mix to dissolve tablet fully.
- 3 Take Photometer reading immediately. The DPD Glycine complexes ozone in the sample and the result displayed equates to chlorine or bromine present in the sample only.
- 4 Subtract the result obtained in Step 3 from the initial result to determine the ozone concentration specifically.

**Test 5 Copper-Total/5****Range:** 0-5.00mg/l (ppm) Cu**Colour change:** Colourless - Purple

- 1 Fill test cuvette with sample to the 10ml mark.
- 2 Add one Coppercol No 1 tablet and one Coppercol No 2 tablet, crush and mix to dissolve.
- 3 Take photometer reading.

**Test 6 pH-Phenol Red****Range:** pH 6.5-8.5**Colour change:** Yellow - Red

- 1 Fill test cuvette with sample to the 10ml mark.
- 2 Add one Phenol Red tablet, crush and mix to dissolve completely.
- 3 Take photometer reading.

**Test 7 Total Alkalinity****Range:** 0-500mg/l (ppm) CaCO<sub>3</sub>**Colour change:** Yellow - Green - Blue

- 1 Fill test cuvette with sample to the 10ml mark.
- 2 Add one Alkaphot™ tablet, crush thoroughly and mix. Ensure all particles have dissolved completely.
- 3 Allow to **stand for one minute**.
- 4 Take photometer reading.

**Note:** If a thin yellow layer is observed at the bottom of the tube, the cuvette should be thoroughly remixed before measurement.

**Test 8 Calcium Hardness****Range:** 0-500mg/l (ppm) CaCO<sub>3</sub>**Colour change:** Violet - Orange

- 1 Fill test cuvette with sample to the 10ml mark.
- 2 Add one **Calcicol No 1** tablet, crush and mix to dissolve.
- 3 Add one **Calcicol No 2** tablet, crush and mix to dissolve.
- 4 **Stand for two minutes.**
- 5 Take photometer reading.

**Note:** this method is calibrated for standard pools. For saltwater/seawater pools, please use Test 34 Calc.Hard.Salt.

**Test 9 Cyanuric Acid****Range:** 0-200mg/l (ppm) CNA**Colour change:** Clear - Cloudy  
(turbidimetric method)

**Note:** Cyanuric acid is also commonly referred to as 'Chlorine Stabiliser' or 'Pool Conditioner'.

- 1 Fill test cuvette with sample to the 10ml mark.
- 2 Add one **Cyanuric Acid** tablet. **DO NOT CRUSH. Allow to disintegrate for at least two minutes.** A cloudy solution indicates the presence of cyanuric acid.
- 3 Crush any remaining undissolved tablet, mix fully and take photometer reading.

**Test 10 Iron/1****Range:** 0-1.00mg/l (ppm) Fe**Colour change:** Colourless - Pink

- 1 Fill test cuvette with sample to the 10ml mark.
- 2 Add one **Iron LR tablet**, crush and mix to dissolve.
- 3 **Stand for one minute.**
- 4 Take photometer reading.

**Test 88 Calcium Hardness (Saltwater Pool Calibration)****Range:** 0-500mg/l (ppm)**Colour change:** Violet - Orange

- 1 Fill test cuvette with sample to the 10ml mark.
- 2 Add one **Calcicol No 1** tablet, crush and mix to dissolve.
- 3 Add one **Calcicol No 2** tablet, crush and mix to dissolve.
- 4 **Stand for two minutes.**
- 5 Take photometer reading.

### Test 77 Water Balance

To determine Water Balance Index, select either Palintest or Langelier from the System Mode prior to commencing.

In both Palintest and Langelier test methods, three parameters are measured using the Pooltest 9 in a defined sequence with the result for Water Balance displayed at the test conclusion.

Alkalinity (Alkaphot), Calcium Hardness (Calcicol) and pH (Phenol Red) tests are required. Prepare the test solutions as described in the individual parameter test methods and proceed as follows:

#### Palintest Water Balance

- 1 Select Test 77 by pressing the Alkalinity key (no. 7) twice or from the 'Choose a Test' list.
- 2 Carry out the Alkalinity test then select 'Follow-On' from the results screen.
- 3 Carry out the Calcium Hardness test then select 'Follow-On' from the results screen.
- 4 Carry out the pH test then select 'Follow-on' from the results screen.
- 5 The Water Balance Index is calculated and is displayed. See the table below for more details of the results guidance

#### Water Balance Guidance

LANGELIER		PALINTEST		Recommendation
Index	Water Balance Condition	Condition	Water Balance Condition	
<-1.5	Corrosive	<9.6	Highly Corrosive	Increase pH to 7.5 - 7.8. Increase Calcium Hardness to at least 50mg/l. Increase Total Alkalinity to 100mg/l or higher as necessary. Retest Water Balance.
-0.6 to -1.5	Corrosive	9.6 to 10.5	Corrosive	
-0.1 to -0.5	Corrosive	10.6 to 10.9	Acceptable Balance	Retest water regularly.
0.0	Ideal Balance	11.0 to 11.2	Ideal Balance	No action required.
0.1 to 0.5	Scale Forming	11.3 to 11.6	Acceptable Balance	Retest water regularly.
0.6 to 1.5	Scale Forming	11.7 to 12.6	Scale Forming	Decrease pH to 7.2 - 7.5. Decrease Total Alkalinity to 150mg/l or lower as necessary. Retest Water Balance.
>1.6	Scale Forming	>12.7	Highly Scale Forming	

**Note:** Always keep the pH, Total Alkalinity and Calcium Hardness levels within the limits recommended in pool operating instructions and chemical suppliers' recommendations. Seek specialist advice if corrosion or scale formation is still apparent even though the water is shown to be in a balanced condition.

**Note:** the Palintest Water Balance test has been calculated for an average heated swimming pool (82°F; 28°C). For unheated swimming pools, subtract 0.1 from the index value obtained. For higher temperature pools and spas, add 0.1 to the index value obtained.

#### Langelier Saturation Index Water Balance

To complete the Langelier method, a separate Total Dissolved Solids (TDS) meter is required to provide TDS and temperature values which are entered manually.

Prepare the test solutions and proceed as follows:

- 1 Select Test 77 by pressing the Alkalinity key (no. 7) twice or from the 'Choose a Test' list.
- 2 Carry out the Alkalinity test then select 'Follow-On' from the results screen.
- 3 Carry out the Calcium Hardness test then select 'Follow-On' from the results screen.
- 4 Carry out the pH test then select 'Follow-on' from the results screen.
- 5 Manually enter the TDS reading (in mg/l or ppm) taken using the numerical keys. Select 'OK' when the figure on screen is correct.
- 6 Manually enter the temperature using the numerical keys and select 'OK'.
- 7 The Langelier Saturation Index is calculated and is displayed.

## 9.0 Calibration/Validation

Your Pooltest 9 is delivered with a calibration certificate validating the performance of the instrument as it leaves Palintest.

We recommend annual service and calibration of all photometric instruments in normal use.

The Pooltest 9 also includes an automatic routine to validate analytical performance using certified Palintest Check Standards. Accessed via the Mode menu, the **Check Standard Mode** provides a field method of ensuring your instrument is operating within defined specifications and also a troubleshooting method for unexpected results.

Every Palintest Check Standards set is supplied with certified values expressed as %T (Transmission), derived from traceable reference materials. Acceptable tolerances are defined on the certificate and are automatically specified within the Pooltest 9.

### 9.1 Check Standard Mode

Access Check Standard Mode from the Mode screen. Highlight Check Standard Mode and press OK.



Two choices are offered:

**Enter Check Standard Values** use the up/down keys to adjust the displayed values to match the certificate

**Check Standard Measurement** insert the Check Standards in the defined order to generate a validation report

### 9.2 Enter Check Standard Values

Each standard has two values assigned, for two individual wavelengths.



Use the up/down keys to adjust the values to match the certificate, following the order defined on the display. Press OK when the correct value is shown and the prompt will forward to the next value.

Upon completion the message **Check Standard Values assigned successfully** will be displayed.

Press **OK** to return to the Check Standard Mode menu.

### 9.3 Check Standard Measurement

Follow the on-screen prompts to insert the Check Standards in the defined order. The Pooltest 9 will automatically measure the Transmittance at the required wavelength.

Upon completion of the sequence the results are displayed on screen with pass or fail status.



If the Check Standard Mode reports a failure, see Appendix 2 Troubleshooting for guidance or contact your local Palintest supplier.

Photometric analysis is a very powerful technique, providing accurate analysis of a wide range of critical swimming pool, spa, hydrotherapy and hot tub parameters.

Palintest has focused on simplifying the test methods and equipment used for this technique but there are still a number of ways to ensure the results you generate are as accurate as possible:

- 1 Always use genuine Palintest reagents when using the programmed test methods. Each parameter has a unique calibration which has been generated using Palintest reagents. Alternative reagents may follow the same general methodology but can differ substantially in formulation and colour generated thereby rendering the calibration and results inaccurate.
- 2 Always correct for the blank value - any inherent colour in the sample (which may not be visible to the naked eye) will offset the result if the blank step is omitted. If the sample colour is too intense for the photometer to blank use dilution with deionised water to reduce the intensity. Remember to dilute the sample to the same extent for analysis.
- 3 Always respect the reaction time specified within the instructions. Some methods produce instant colour whereas others require a reaction time to reach full development. Taking a reading before the reaction time has elapsed may lead to low results.
- 4 The presence of solids, either large or in the form of turbidity, can adversely affect the quality of results by preventing incident light from reaching the detector. The blanking step can reduce the impact of turbidity interference but large solid particles must be removed prior to analysis. Solids can be removed by filtration prior to analysis or, if the solids are settleable and will not lie in the optical path, allowing them to settle in the photometer cuvette can be acceptable.
- 5 Calibration curves relate transmission/absorbance to concentration to provide result data but not all calibration ranges are linear. Frequently at higher concentrations the curve 'flattens' leading to higher potential variability in results. If greater accuracy is required than can be achieved on neat samples then dilution can be used to improve performance.
- 6 Ensure the photometer cuvette is clean, has no droplets on the outside and is not excessively scratched. Good technique is to wipe the outside surface of the cuvette prior to inserting into the optical chamber to prevent contamination of the optical system.
- 7 Always use good quality, genuine Palintest cuvettes. Use the orientation mark to ensure repeatable positioning of the cuvette.
- 8 Maintain the cleanliness of the optical chamber by only inserting clean cuvettes. If the chamber becomes fouled or sample is spilled the base can be removed for cleaning access. Clean the optical chamber with a soft cloth. Do not use abrasive chemicals or scouring agents.
- 9 Always use the light cap provided to prevent ambient light affecting results. This is especially relevant when operating in strong sunlight or other light conditions.
- 10 Ensure your Pooltest 9 is operating effectively by using Palintest Check Standards and the Check Standard Mode (see Section 9 Calibration/Validation) and having the photometer serviced and calibrated at regular intervals. Calibration is recommended at 12 month intervals for normal usage and can be provided by your local Palintest distributor.

The Pooltest 9 features self-diagnostic software and hardware to optimise performance and battery life. The Info panel indicates the status of the Pooltest 9 and any specific fault conditions are defined and displayed on screen.

## Optical Errors

### I have an Error 9 message

Error 9 is caused by the blank cuvette being too dark to allow the blanking step to be carried out.

Check that the correct cuvette is being used i.e. ensure the sample cuvette is not being used for blanking.

If the sample is too highly coloured or contains significant solids, dilute and repeat the blanking step.

If the problem persists and the blank cuvette is not the issue, clean the optical chamber by removing the access cover and cleaning with a soft cloth. Do not use corrosive or abrasive chemicals.

### I have an Error 7 message

Error 7 is caused by too much ambient light reaching the detector. Use the light cover provided with the instrument.

## Check Standard Issues

### How do I maintain my Check Standards?

Check Standards are manufactured to precise values/tolerances, certified against traceable reference materials and provided in sealed cuvettes. Do not decant or remove the sealed cap from the Check Standard.

Ensure the Check Standard cuvettes are clean and dry using lint-free cloths before inserting into the optical chamber.

Insert the Check Standard aligning the orientation arrow towards the front of the optical chamber.

Values assigned to calibration standards are defined at 20-25°C. Extremely high or low ambient temperatures can affect Check Standard results so ensure standards are at the defined temperature to effectively validate.

Check Standards have a two year shelf-life, after which the colours will no longer be valid. Please dispose of the expired standards after this period according to the MSDS.

### My Check Standard validation has failed

Photometers may fail the Check Standard validation step due to the requirement for service/calibration. Contact your local Palintest partner for service and support.

Ensure the Check Standards are inserted correctly, using the orientation mark to align and inserted fully. Use the light cap to prevent any ambient light interference.

Service/calibration is recommended at annual intervals in normal operation.

## Battery/Power Issues

### My batteries are running out too quickly

Use good quality batteries and always replace the batteries completely when indicated on the Info Panel. The battery compartment is located underneath the Pooltest 9 and secured by four screws.

Remove the battery cover and replace batteries as a set.

Refit the battery cover ensuring the cover is tight enough to prevent water ingress. Do not overtighten as this will damage the screw housings.

The Pooltest 9 has a number of power-saving features such as auto-dim of the backlight and automatic power down after inactivity (See Section 6). Activating these features will prevent power being used unnecessarily. can also be deactivated if not required.

Using the USB port to provide power will automatically prevent battery power being consumed when mains or external power is available.

### My photometer will not switch on

The Info Panel provides an ongoing indication of power available from the battery supply. When the voltage falls below 3.0V the Pooltest 9 will not switch on as the available power will not be sufficient to provide effective photometric testing.

Use the USB cable to provide an alternative power supply. If the photometer still fails to switch on, contact your local Palintest partner for service support.

**My USB power supply is not working**

Ensure your PC is not operating in power save mode or the mains supply is not isolated.

Replace the cable with an alternative to ensure the cable is not faulty.

**USB Connection Issues****I cannot download my data**

Check the USB mode is set to Hard Disk, not COM port mode. In Hard Disk mode the data can be 'dragged and dropped' as with a conventional memory stick and is available in CSV format.

Opening CSV data files can be accomplished by a number of text editing or spreadsheet programs.

**Where do I find the COM port drivers?**

The latest drivers are available at [www.palintest.com](http://www.palintest.com)


COM port drivers are provided for Windows operating systems (Windows Vista, XP and 7).

**Care and Maintenance**

The Pooltest 9 contains no user-serviceable parts internally. User maintenance is only recommended for cleaning of the optical chamber, changing batteries and validating performance using the Check Standard Mode.

**Cleaning the Optical Chamber**

The optical chamber has been designed to support removal and cleaning with a lint-free cloth as required by removal of the access cover.

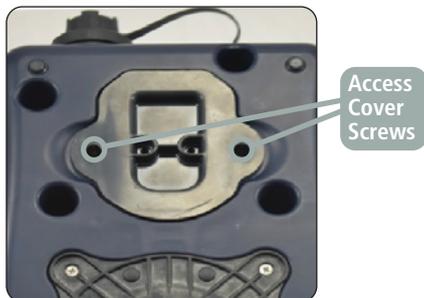


Do not use any of the following agents when cleaning this optical chamber:

- Abrasive cloths
- Corrosive chemicals
- Any organic solvents

Do not overtighten the screws on re-assembly to avoid damaging the access cover.

**Replacing the Batteries**

Remove the four retaining screws from the battery cover and gently prise the cover free.

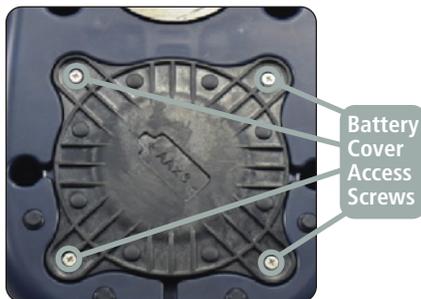

Replace all batteries at the same time.

Ensure on replacing the battery cover that the gasket is correctly located to prevent any water ingress. Tighten the screws carefully but do not overtighten.

## Pooltest 9

Instrument Type	Dual light source photometer offering direct-reading of pre-programmed test calibrations and Transmittance
<b>Optical System</b>	
Optical Source	Dual LED sources with optical filters
Optical Detectors	Silicon photodiodes
Peak Wavelengths	550nm, 570nm, 600nm
Wavelength Selection	Automatic
Bandwidth	±5nm
Range	1 - 100%T
Accuracy	± 1.0% T
<b>User Interface</b>	
Display	320 x 240 pixel LCD with contrast adjustment
Backlight	Timed, on key press with auto-dim and off
User Interface	On-screen prompts available in English, French, Spanish, German, Italian, Turkish and Mandarin (Chinese).
Keypad	Numeric keypad with assignable Hotkeys. Four navigation keys and OK key
<b>Physical</b>	
Size (W x L x H)	150 x 250 x 70mm
Weight	975g
IP Rating	IP67
<b>Power Supply</b>	
Batteries	3 x 1.5v 'AA' batteries
Lifetime	40 hours (typical use, backlight off, 'AA' alkaline cells)
Mains	5V DC, 900mA delivered via USB port
Power Management	Auto-switch off (user selectable between 5-15 minutes on battery) or continuous operation
Power Saving	User control for Backlight to minimise battery consumption
<b>Test Methods</b>	
Tests Available	Pre-programmed for Palintest tablet reagent and liquid reagent tests. Also operates in Transmittance mode
Test Selection	Test number entry or direct access from assigned keys
Test Cuvettes	12-20mm OD with automatic cuvette centering
Result Units	g/l, mg/l, ppm, mmol/l, µmol/l, µg/l
Blanking	Automatic blanking at all wavelengths. Blank value stored in memory until power off or new blank recorded
<b>Connectivity</b>	
USB	USB Type B Connector. Waterproof connector available
<b>Data Management</b>	
Instrument Memory	Non-volatile storage
Memory Capacity	Up to 100 data sets. Each data set includes date, time, Sample ID, Operator ID, method number, method name, result, units
Sample IDs	Up to 24 at any time
Operator IDs	Up to 12 at any time
Data Download	To computer via USB using Hard Disk or COM port mode.
Data Output Format	Plain text
Software Upload	Software update by 'drag and drop' in USB Hard Disk Mode

## Reagents

Name	Starter Pack (50 tests)	Replacement Pack (250 tests)
Total Alkalinity (Alkaphot®)	PM 188	AP 188
Bromine	PM 060	AP 060
Calcium Hardness (Calcol™)	PM 252	AP 252
Chlorine - Free (DPD 1)	PM 011	AP 011
Chlorine - Free, extended range (DPD XF)	PM 013	AP 013
Chlorine - Free, Combined and Total (DPD 1 and DPD 3)	PM 031	AP 031
Chlorine - Free, Combined and Total, extended range (DPD XF and DPD XT)	PM 033	AP 033
Chlorine - Total (DPD 4)	PM 041	AP 041
Chlorine - Total (DPD 3 only)	-	AP 031/1
Chlorine - Total, extended range (DPD XT only)	-	AP 033/1
Copper - Free, Combined and Total (Coppercol®)	PM 186	AP 186
Cyanuric Acid	PM 087	AP 087
Iron LR	-	AP 155
Ozone (DPD method)	PM 056	AP 156
pH - Phenol Red	PM 130	AP 130

## Accessory Reagents

DPD Glycine, 250 pack	AT 056
EDTA Tablets, 250 pack	AT 090
DPD Oxystop, 250 pack	AP 017

## Check Standards/Service for Pooltest 9

<b>PT 791 Pooltest 9 Check Standards</b>	Validation standards for Pooltest 9 with certificate. Supplied in hard transport/storage case
<b>S06233</b>	Pooltest 9 Professional Series Service and Calibration

## Cuvettes and Racks

<b>PT 595/5 Photometer Cuvettes</b>	Pack of 5 glass cuvettes with caps. 20mm OD, 77mm tall with 10ml graduation. For Pooltest 25 and Pooltest 9
<b>PT 501 Cuvette Rack</b>	Rack for PT 595. Holds 8 cuvettes
<b>PT 502 Crush/Stirring Rods</b>	Pack of 10 crush/stirring rods
<b>PT 663 Cuvette Brush</b>	For cleaning cuvettes, length 120mm
<b>PT 500 De-ion Pack</b>	

# Palintest

A **Halma** company

[www.palintest.com](http://www.palintest.com)

Registered office:  
Palintest House, Kingsway, Team Valley, Gateshead, NE11 0NS, UK

ZIINST7009 V4