

Palintest

Kemio

Quick Start Guide



Get the most from your Kemio


Register your Kemio instrument online to receive the latest software, instructions and updates from Palintest.

Scan the QR code or visit:

www.palintest.com/product/kemio/



- 1 Fill out the required fields in the form
- 2 Enter your instrument's serial number from the bottom of the instrument. [see figure 1]
- 3 Check the boxes to sign up to receive the latest news from Palintest and updates about instrument servicing.
- 4 Press 'Register your product' to submit the form.

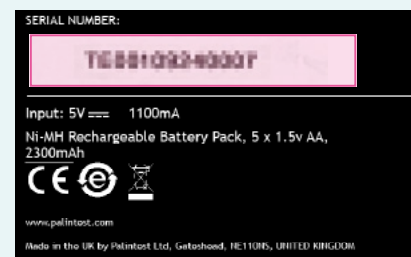


[figure 1]

Add Batch Information


- 1 Press CONFIGURATION, then BATCH INFORMATION.

- 2 Add new batch information.

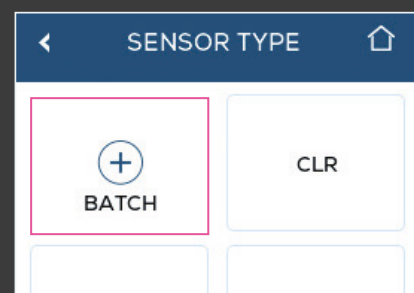


- 3 Scan the QR code on the side of the sensor box.




- 4 Press  to return to the home screen.

Perform a test

- 1 Press the power button to turn on the instrument.

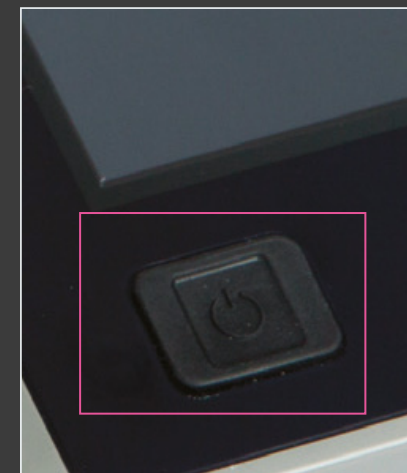


- 2 Press PERFORM TEST,

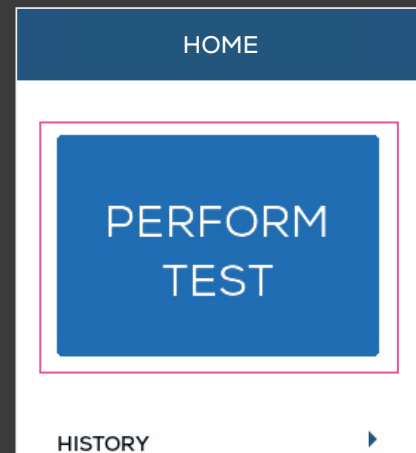

- 3 Follow the on-screen test instructions.



- 4 After the countdown, view the results on screen.

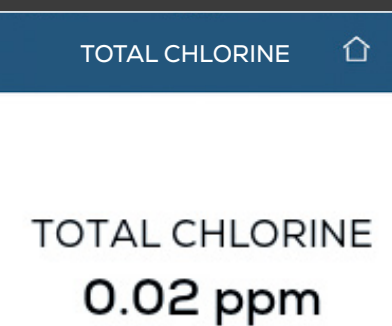

For details and troubleshooting, download the full test booklet at www.palintest.com

Get the most from your Kemio



Kemio is the next generation measurement platform which can be tailored to suit your application needs.

- Enrich your test results.
- Simplify your decision making with pass/fail results.
- Protect your data.

Download the full instrument manual from the product page at www.palintest.com

Register your product to receive the latest software updates.

Kemio is manufactured in the UK by Palintest Ltd, please see the technical support contacts by region below

Technical Support

Head Office

T: +44 (0)191 491 0808
E: sales@palintest.com

Palintest House
Kingsway
Team Valley
Gateshead
Tyne and Wear
NE11 0NS
United Kingdom

APAC

T: +61 1300 13 15 16
E: apac@palintest.com

Palintest
17 Maud Street
Newstead
QLD 4006
Australia

Americas

T: +1 720 221 6878
E: info@palintestusa.com

Palintest
600 Corporate Circle
Suite F
Golden
80401
USA

