

Palintest

Water Analysis Technologies

Fluoride

Photometric test for Fluoride in drinking water, natural water and treated water

COLOUR CHANGE

Red to Yellow

RANGE:

0 - 1.5 mg/L F

TECHNICAL RESOURCE:

Fluoride Test Method, Technical Information

01



Fill to the 10 mL line with sample.

02




Use this to "blank" the instrument. Place in cell holder and press Blank.

03



Prepare the sample by adding 4 drops of the Fluoride Liquid Reagent and stir to mix.

04

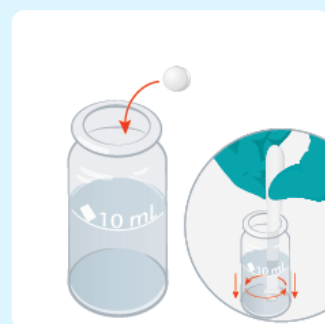

Then, add a Fluoride No2 tablet and crush and stir.

05



Place in the cell holder and press Measure.

06



Allow timer to count down 5 minutes. The concentration of Fluoride will then be displayed.